


Waterproofing system for Industrial roofs and balconies

Basic Step by Step Guide



#### **Industrial Roofs and balconies**



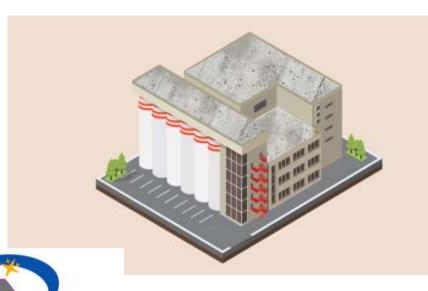

## Step 1

Casting of Roof Slab with the addition of Water Guard Crysta Admix 103 in the concrete mix. (if Needed)



#### **Industrial Roofs and balconies**











### Note

conduits can be covered with a cement sand mortar comprising of **Ressi SBR 5850** and **Silmix.** Chamfers can also be made using the same materials. Along with the floor screed in slope



#### **Industrial Roofs and balconies**




Step 2

Application of Water Guard 3020N.



#### **Commercial Roofs and balconies**

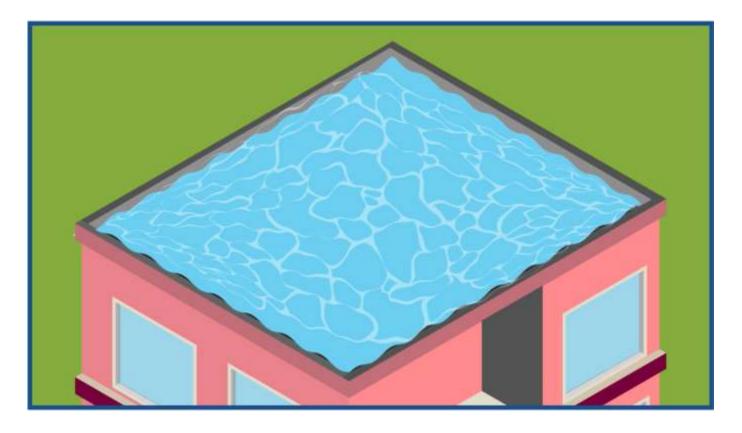

## Note

Flood Test of the roof slab after Coating



# System Summary (Industrial Roofs and Balconies

A: Slab Pouring with Water Guard Crysta Admix 103

**B: Conduit Pipes** 


C: Cement and sand mortar with Ressi SBR 5850

D: Floor Screed with Ressi SBR 5850 and Silmix

E: Water Guard 3020 N

F: Chamfer with Ressi SBR 5850 and Silmix

**G**: Drain Point

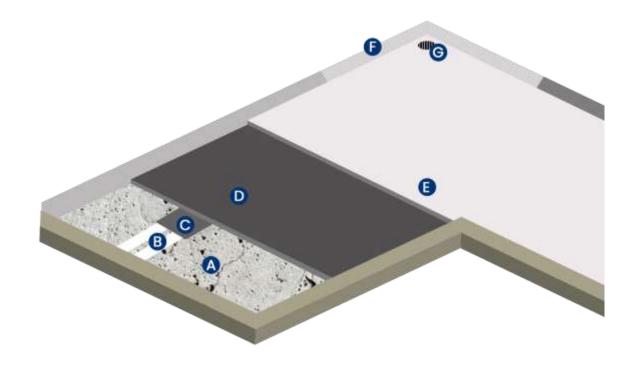











An easy to maintain effective solution for industrial roofs.



## Thank You

#### Where To Find Us

D-83, S.I.T.E., Industrial Area, Manghopir Road, Karachi - 75530, Pakistan.

**Tel:** +92-21-32593800-02

**Mob:** +92-309-7772464

Email: info@ressichem.com

Website: www.ressichem.com



